

Lane Change Assistance , (7Y1),(7Y5)

From September 2014



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Lane Change Assistance Control Module

J533 Data Bus on Board Diagnostic Interface
J769 Lane Change Assistance Control Module
ST4 Fuse Panel 4
SF5 Fuse 5 (On Fuse Panel F)
T12t 12-Pin Connector
T32b 32-Pin Connector

- 51 Ground Connection in Luggage Compartment, Right
- 386 Ground Connection 21 (in Main Wiring Harness)
- B108 CAN Bus Extended High Connection 1 (in Main Wiring Harness)
- B109 CAN Bus Extended Low Connection 1 (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Data Bus Wire (CAN Bus)

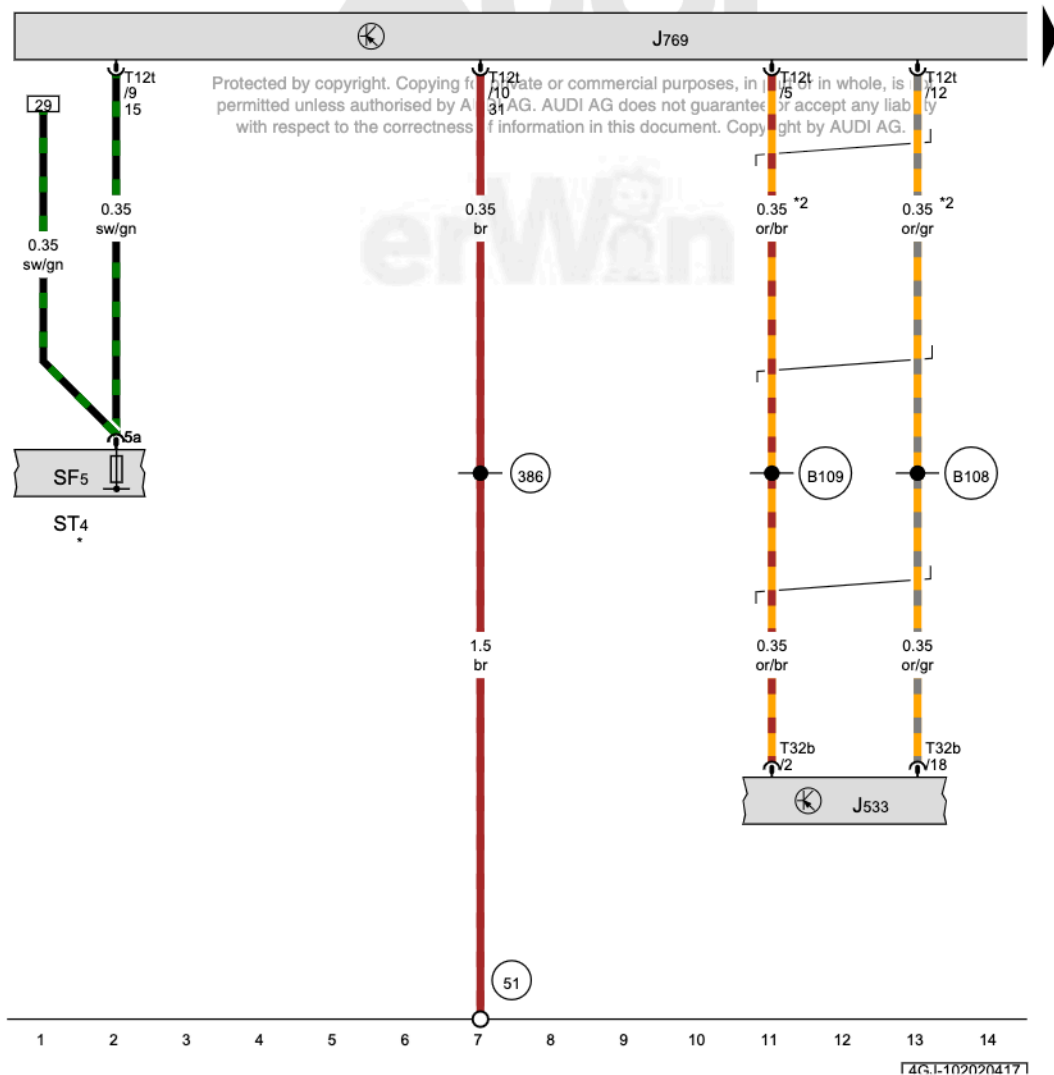


Lane Change Assistance Button, Lane Change Assistance Control Module, Lane Change Assistance Indicator Lamp

- E530 Lane Change Assistance Button
- J386 Driver Door Control Module
- J769 Lane Change Assistance Control Module
- K232 Lane Change Assistance Indicator Lamp
- L156 Switch Illumination Bulb
- T5aa 5-Pin Connector, In the Driver Door, Black
- T12t 12-Pin Connector
- T32k 32-Pin Connector

- 267 Ground Connection 2 (in Driver Door Wiring Harness)
- 303 Ground Connection 3 (in Driver Door Wiring Harness)
- R52 Connection 58S (in Driver Door Wiring Harness)


* Data Bus Wire (CAN Bus)

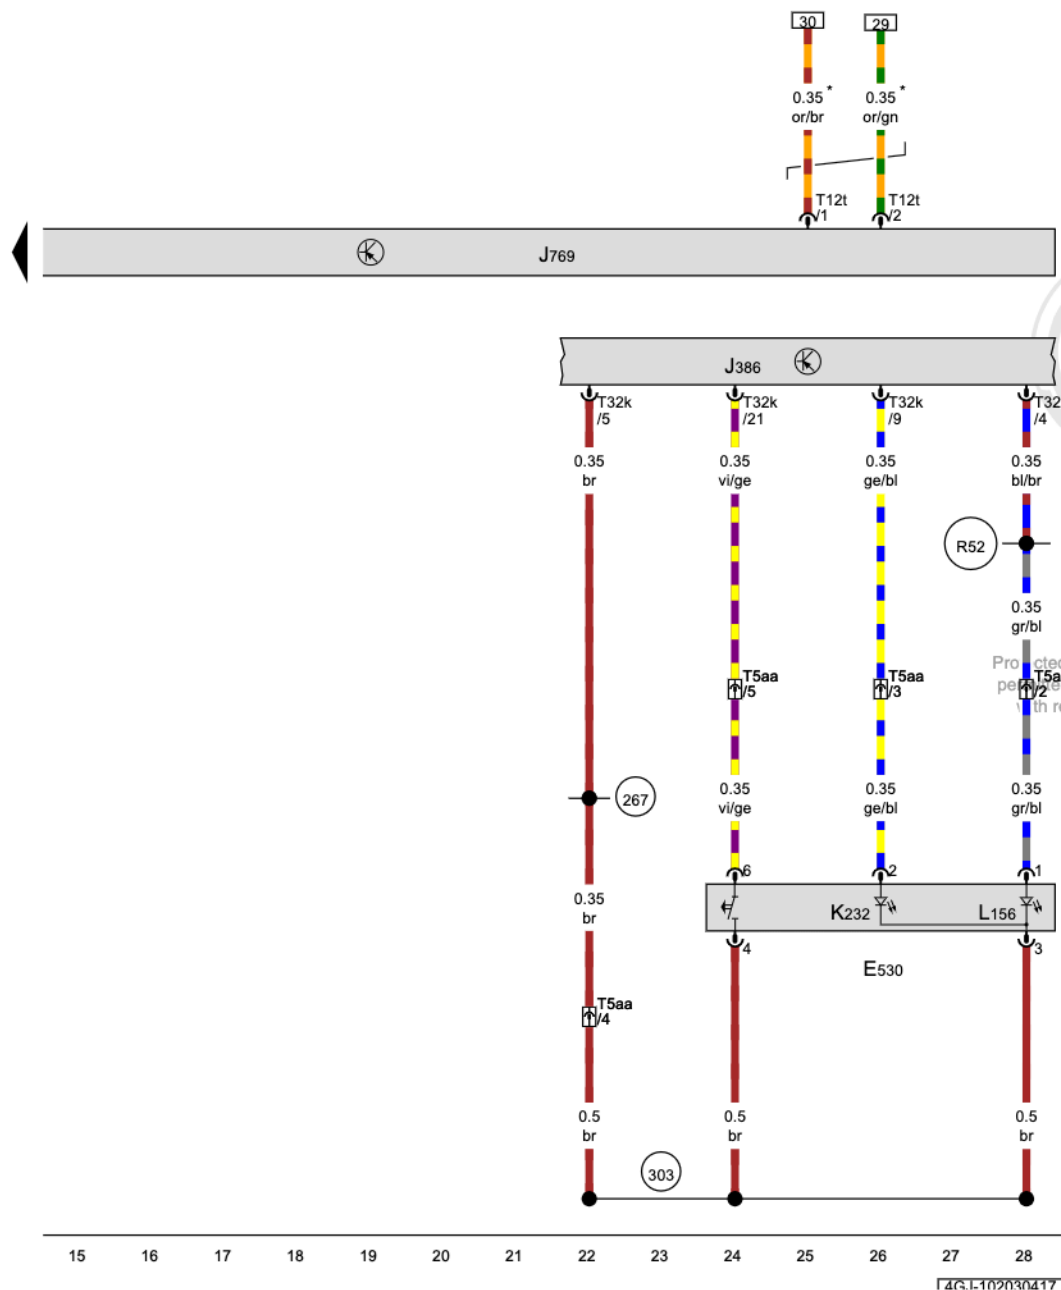

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability in respect to the correctness of information in this document. Copyright by AUDI AG.

Lane Change Assistance Control Module 2, Lane Change Assistance Warning Lamp in Driver Exterior Rearview Mirror

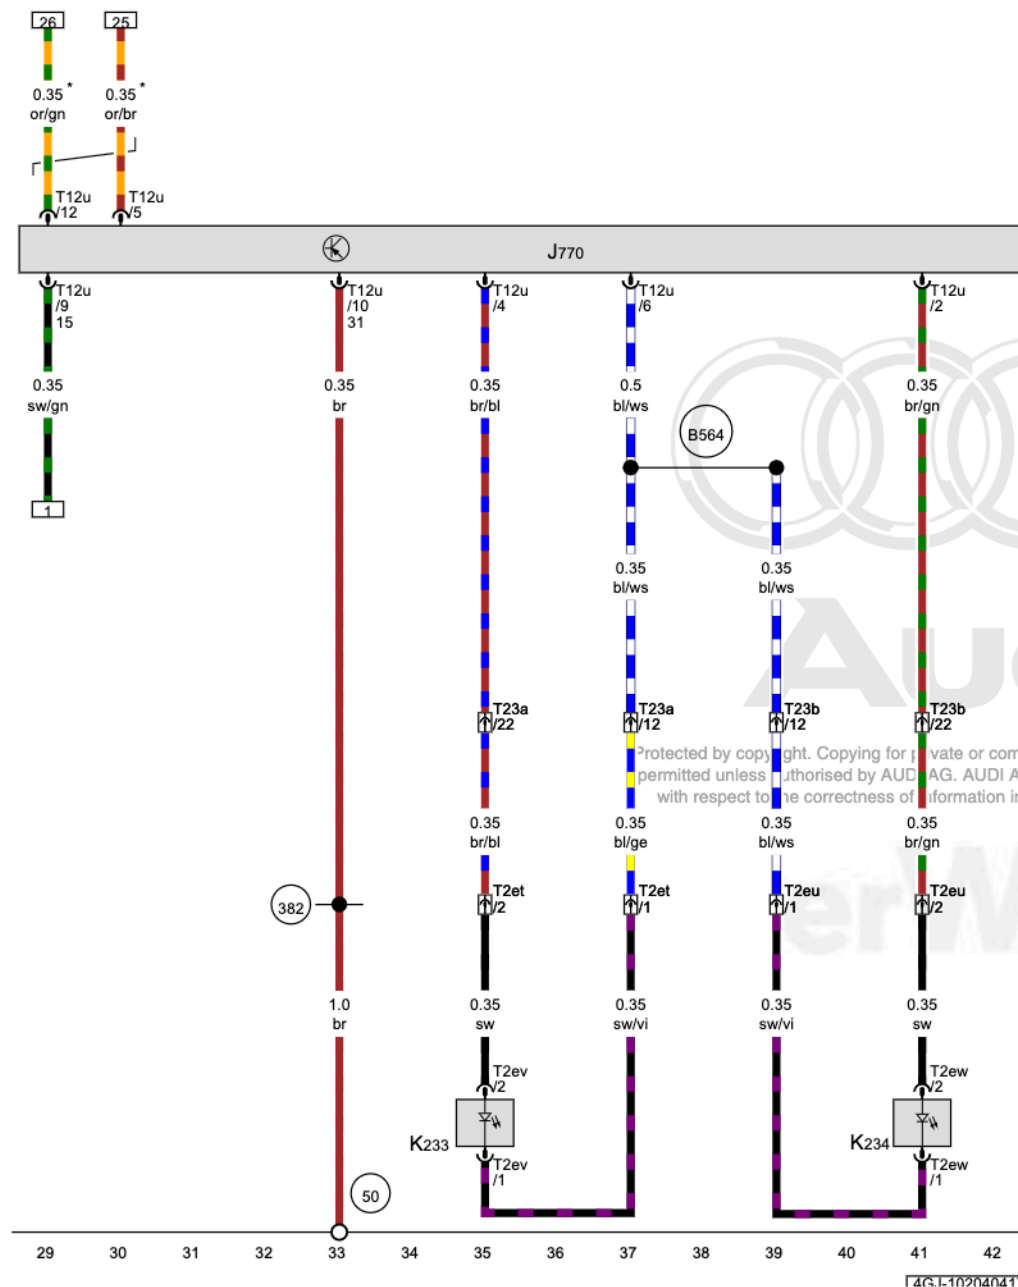

- J770 Lane Change Assistance Control Module 2
- K233 Lane Change Assistance Warning Lamp in Driver Exterior Rearview Mirror
- K234 Lane Change Assistance Warning Lamp in Front Passenger Exterior Rearview Mirror
- T2et 2-Pin Connector, In the Driver Door
- T2eu 2-Pin Connector, In the Front Passenger Door
- T2ev 2-Pin Connector
- T2ew 2-Pin Connector
- T12u 12-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar
- T23b 23-Pin Connector, On the Right A-Pillar

- 50 Ground Connection in Luggage Compartment, Left
- 382 Ground Connection 17 (in Main Wiring Harness)
- B564 Connection 31 (in Main Wiring Harness)

* Data Bus Wire (CAN Bus)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink